


 










 





 





 



 




 























Original	Recharge	Original	Recharge
	Power		Power
	<<		<< / Tune-
	Play		Play / Slow
	>>		>> / Tune+
	Stop		Stop / Hold
	Pause		Pause / Step / Freeze
	Source		AV / Input / RDS
	Home		Menu / Home
	Format		Picture / Format
	Back		Back / Return
	List		Smart / List
	Up		Up
	Info		Info / Angle
	Left		Left
	OK		OK
	Right		Right
	Adjust		D.Menu / Top
			Down
			Options
			Vol+
			Mute
			Vol-
			Red
			Green
			Yellow
			Blue
			1
			2
			3
			4
			5
			6
			7
			8





Original	Recharge	Original	Recharge
 9	 9		
 0	 0		

