













 























Original	Rechange
 Power	 Power
 Sleep	 Sleep / Timer
 Top Menu	 Sound / Title
 Subtitle	 Subtitle / EQ
 Display	 Display / Media
 Setup	 Setup / OPT /
 1	 1
 2	 2
 3	 3
 Disc	 Red / Netflix / Search
 4	 4
 5	 5
 6	 6
 >10/-/-	 Guide / EPG / -/-
 7	 7
 8	 8
 9	 9

Original	Rechange
 0	 0
 Menu	 Menu / Home
 EQ	 Shift + Subtitle / EQ
 Up	 Up
 Return	 Back / Return
 Left	 Left
 Enter	 OK
 Right	 Right
 Marker	 Fav / Marker / PC
 3D AI	 TV/Radio /
 Down	 Down
 Angle	 Info / Angle
 AV Effect	 AV / Input / RDS
 Prologic	 Zoom / Size
 CH Select	 Green / APP / Repeat
 Test	 Text / Goto
 Digital S.Woofer	 Blue / Prime Video / Random





Original	Rechange
Super SRND	Eject / Surround
VCR(EXT)/VDP(AUX)	Shift + 4
Tape/Deck 1/2	Shift + 5
DVD	Shift + 2
Tuner/Band	Shift + 6
Play Mode	Smart / List
Cancel	Exit / Cancel / Clear
</Pause	Pause / Step / Freeze
Stop	Stop / Hold
Play	Play / Slow
Audio	Audio / Lang I/II
Mix 2CH	Yellow / YouTube / Repeat
<< Slow/Search	<< / Tune-
Slow/Search >>	>> / Tune+
Shift	Rec / Rec Mode
Muting	Mute / Dimmer
I<< Skip	I<< / Preset-

Original	Rechange
Skip >>I	>>I / Preset+
Vol-	Vol-
Vol+	Vol+

