



Original		Recharge		Original		Recharge	
	Power VCR		Power		CH- Tv	+	Shift + CH- /
	Power Tv	+	Shift + Power		Menu		Menu / Home
	Replay		Blue / Prime Video / Random		Input		Smart / List
	OSD/Display		Display / Media		Reset		Back / Return
	Exit		Exit / Cancel / Clear		Pause/Step		Pause / Step / Freeze
	AV Link		AV / Input / RDS		OK		OK
	Audio		Audio / Lang I/II		Stop		Stop / Hold
	Search		Red / Netflix / Search		Down		Down
	Rec		Rec / Rec Mode		Play		Play / Slow
	Index >>I		>>I / Preset+		Up		Up
	I<< Index		I<< / Preset-		Right		Right
	Tracking-V-Lock		CH+ / Page+		>>		>> / Tune+
	Tracking-V-Lock Down		CH- / Page-		<<		<< / Tune-
	AV Tv	+	Shift + AV / Input / RDS		Left		Left
	Volume+ Tv		Vol+		Prog/Check		TV/Radio /
	Volume- Tv		Vol-		Cancel	+	Shift + Exit / Cancel / Clear
	CH+ Tv	+	Shift + CH+ /		SP/LP/EP		Picture / Format

Page+





Original	Rechange
TIMER	TIMER SLEEP Sleep / Timer
^	SHIFT + [Up Arrow] Shift + Up
v	SHIFT + [Down Arrow] Shift + Down
+ DATE	TV 1 1
DATE -	VIDEO 4 4
+ ON	DVD 2 2
ON -	TAPE 5 5
+ OFF	CD - STB 3 3
OFF -	TUNER 6 6

Original	Rechange

