







 

 

 







 
 




Original	Rechange
	
Power	Power
	
Input	AV / Input / RDS
	
Smart Colors	Display / Media
	
FAV	Fav / Marker / PC
	
123	1
	
Up	Up
	
Left	Left
	
OK	OK
	
Right	Right
	
Down	Down
	
←	Back / Return
	
[=]	D.Menu / Top
	
Home	Menu / Home
	
Vol+	Vol+
	
* Up	CH+ / Page+
	
Vol-	Vol-
	
Mute	Mute / Dimmer

Original	Rechange
	
* Down	CH- / Page-
	
<<	<< / Tune-
	
Play	Play / Slow
	
Pause	Pause / Step / Freeze
	
>>	>> / Tune+
	
P.Mode	Picture / Format
	
S.Mode	Sound / Title
	
YouTube	Yellow / YouTube / Repeat
	
Disney+	Green / APP / Repeat
	
prime video	Blue / Prime Video / Random
	
Google Play	Red / Netflix / Search

