



Original	Rechange
Power	Power
Input	AV / Input / RDS
Smart Colors	Display / Media
FAV	Fav / Marker / PC
123	1
Up	Up
Left	Left
OK	OK
Right	Right
Down	Down
←	Back / Return
[=]	D.Menu / Top
Home	Menu / Home
Vol+	Vol+
* Up	CH+ / Page+
Vol-	Vol-
Mute	Mute / Dimmer

Original	Rechange
* Down	CH- / Page-
<<	<< / Tune-
Play	Play / Slow
Pause	Pause / Step / Freeze
>>	>> / Tune+
P.Mode	Picture / Format
S.Mode	Sound / Title
YouTube	Yellow / YouTube / Repeat
Disney+	Green / APP / Repeat
prime video	Blue / Prime Video / Random
Google Play	Red / Netflix / Search

