


 


 









 





Original	Recharge
A1	TV 1 1
A2	DVD 2 2
 Stop	 Stop / Hold
 Folder up	 Up
 I<</Back	 I<< / Preset-
 >>I/Next	 >>I / Preset+
 Folder down	 Down
 Prog	 TV/Radio /
 Play (CD/USB)	 Play / Slow
 Pause (CD/USB)	 Pause / Step / Freeze
 Mode	 Picture / Format

Original	Recharge

