

 

 

 



 

 

 



 







 













 


Original	Rechange
 Power	 Power
 Open/Close	 Eject / Surround
 Top Menu	 D.Menu / Top
 Up	 Up
 Menu	 Menu / Home
 Left	 Left
 Enter	 OK
 Right	 Right
 Return	 Back / Return
 Down	 Down
 On Screen	 Display / Media
 Zoom	 Zoom / Size
 Pause	 Pause / Step / Freeze
 I>/Slow	 AV / Input / RDS
 Stop	 Stop / Hold
 I<<	 << / Tune-
 Play	 Play / Slow

Original	Rechange
 >>I	 >> / Tune+
 1	 1
 2	 2
 3	 3
 P.Mode	 Picture / Format
 4	 4
 5	 5
 6	 6
 Clear	 Exit / Cancel / Clear
 7	 7
 8	 8
 9	 9
 0	 0
 Audio	 Audio / Lang I/II
 Subtitle	 Subtitle / EQ
 Angle	 Info / Angle
 Setup	 Setup / OPT /





Original		Recharge	
<input type="radio"/> REPEAT	Repeat	 REPEAT	Green / APP / Repeat
<input type="radio"/> A-B	A-B	 REPEAT A-B	Yellow / YouTube / Repeat
<input type="radio"/> RANDOM	Random	 RANDOM	Blue / Prime Video / Random
<input type="radio"/> MARKER	Marker	 FAV MARKER	Fav / Marker / PC
<input type="radio"/> SEARCH	Search	 SEARCH	Red / Netflix / Search

Original		Recharge	

