











Original	Recharge
 Power	 Power
 Picture	 Picture / Format
 TV Input	 Audio / Lang I/II
 AV Input	 TV/Radio /
 Menu	 Menu / Home
 Text	 Text / Goto
 STTL	 Subtitle / EQ
 List/Provider	 AV / Input / RDS
 i	 Info / Angle
 Exit	 Exit / Cancel / Clear
 Home	 Shift + Menu /
 Netflix	 Shift + Red / Netflix /
 Left	 Left
 Up	 Up
 Right	 Right
 Guide	 Guide / EPG / -/--
 OK	 OK

Original	Recharge
 Option	 Setup / OPT /
 Down	 Down
 Back/Return	 Back / Return
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Vol+	 Vol+
 Mute	 Mute / Dimmer
 CH+	 CH+ / Page+
 Vol-	 Vol-
 CH-	 CH- / Page-
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5





Original		Recharge	
	6		6
	7		7
	8		8
	9		9
	?/eHelp	+	Shift + Info / Angle
	0		0
	Last View		Fav / Marker / PC
	<<		<< / Tune-
	Play		Play / Slow
	>>		>> / Tune+
	l<<		l<< / Preset-
	Pause		Pause / Step / Freeze
	>>l		>>l / Preset+
	My App		Zoom / Size
	Stop		Stop / Hold
	REC		Rec / Rec Mode

Original		Recharge	

