



Original	Rechange	Original	Rechange
	Mute		Mute / Dimmer
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Text		Text / Goto
	P.Mode / OK		Smart / List
	Index		Play / Slow
	P.Mode / OK		Picture / Format
	AV		AV / Input / RDS
	Up / P+		Up
	Up / P+		CH+ / Page+
	Menu		Menu / Home
	Menu		OK
	Left / Vol-		Vol-
	Left / Vol-		Left
	Hold		Stop / Hold
	Right / Vol+		Right
	Right / Vol+		Vol+
	Sub Page		Subtitle / EQ
	Down / P-		Down
	Down / P-		CH- / Page-
	<<		<< / Tune-





Original	Recharge	Original	Recharge
			Vol-
			Left
			Vol+
			Right
			Up
			CH+ / Page+
			<< / Tune-
			Play / Slow
			>> / Tune+
			Down
			CH- / Page-
			Stop / Hold
			Power





Original	Rechange	Original	Rechange
	Vol-		
	Left		
	Right		
	Vol+		
	Up		
	CH+ / Page+		
	<< / Tune-		
	Play / Slow		
	>> / Tune+		
	Down		
	CH- / Page-		
	Rec / Rec Mode		
	Stop / Hold		
	Power		

