



Original	Recharge
 Power	 Power
 Eject/Open/Close	 Eject / Surround
 CD/DVD	 Shift + 2
 VCR	 Shift + 4
 FM/AM	 Shift + 6
 AUX	 Shift + 7
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 AV	 AV / Input / RDS
 7	 7
 8	 8
 9	 9
 0	 0

Original	Recharge
 Program	 TV/Radio /
 Clear	 Exit / Cancel / Clear
 Sound Mode	 Sound / Title
 Audio	 Audio / Lang I/II
 Show View	 Smart / List
 RDS	 Picture / Format
 Display/CLK/CN	 Display / Media
 PR/TRK/Preset Up	 Up
 Set Up/i	 Setup / OPT /
 Left/Tuning-	 Left
 OK/Memory/Ent	 OK
 Right/Tuning+	 Right
 Return	 Back / Return
 PR/TRK/Preset	 Down
 Disc menu	 D.Menu / Top
 Volume+	 Vol+
 Rec/ITR	 Rec / Rec Mode





Original	Recharge
 I<</Backward	 I<< / Preset-
 >>/Forward	 >>I / Preset+
 Stop	 Stop / Hold
 Pause/Step	 Pause / Step / Freeze
 Play	 Play / Slow
 Volume-	 Vol-
 Marker	 Fav / Marker / PC
 Search	 Red / Netflix / Search
 S-Title	 Subtitle / EQ
 Mute	 Mute / Dimmer
 Angle/CM Skip	 Info / Angle
 Repeat A-B/Speed	 Yellow / YouTube / Repeat
 Repeat	 Green / APP / Repeat
 Tv/VCR	 Shift + TV/Radio / Program
 Random	 Blue / Prime Video / Random
 Title	 Shift + Sound / Title
 Zoom	 Zoom / Size

Original	Recharge







Original	Rechange
 Power	 Power
 Eject/Open/Close	 Eject / Surround
 CD/DVD	 Shift + 2
 VCR	 Shift + 4
 FM/AM	 Shift + 6
 AUX	 Shift + 7
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 AV	 AV / Input / RDS
 7	 7
 8	 8
 9	 9
 0	 0

Original	Rechange
 Program	 TV/Radio /
 Clear	 Exit / Cancel / Clear
 Sound Mode	 Sound / Title
 Audio	 Audio / Lang I/II
 Show View	 Smart / List
 RDS	 Picture / Format
 Display/CLK/CN	 Display / Media
 PR/TRK/Preset Up	 Up
 Set Up/i	 Setup / OPT /
 Left/Tuning-	 Left
 OK/Memory/Ent	 OK
 Right/Tuning+	 Right
 Return	 Back / Return
 PR/TRK/Preset	 Down
 Disc Menu	 D.Menu / Top
 Volume+	 Vol+
 Rec/ITR	 Rec / Rec Mode





	Original	Recharge	Original	Recharge
BACKWARD	I<</Backward	I<< / Preset-		
FORWARD	>>I/Forward	>>I / Preset+		
STOP	Stop	Stop / Hold		
PAUSE/STEP	Pause/Step	Pause / Step / Freeze		
PLAY	Play	Play / Slow		
VOLUME-	Volume-	Vol-		
MARKER	Marker	Fav / Marker / PC		
SEARCH	Search	Red / Netflix / Search		
S-TITLE	S-Title	Subtitle / EQ		
MUTE	Mute	Mute / Dimmer		
ANGLE/CM SKIP	Angle/CM Skip	Info / Angle		
REPEAT A-B/Speed	Repeat A-B/Speed	Yellow / YouTube / Repeat		
REPEAT	Repeat	Green / APP / Repeat		
TV/VCR	TV/VCR	Shift + TV/Radio / Program		
Random	Random	Blue / Prime Video / Random		
Title	Title	Shift + Sound / Title		
Zoom	Zoom	Zoom / Size		

