



Original		Recharge		Original		Recharge	
	DVD/VHS Power		Power		8		8
	TV Power		Shift + Power		9		9
	TV CH +		Shift + CH+ /		VIDEO Plus+		TV/Radio /
	TV Volume +		Vol+		* / Reset		Fav / Marker / PC
	Drive Select		Picture / Format		0		0
	TV AV		Shift + AV / Input / RDS		Input Select		AV / Input / RDS
	TV CH -		Shift + CH- /		Delete		Exit / Cancel / Clear
	TV Volume -		Vol-		I<<		I<< / Preset-
	1		1		>>I		>>I / Preset+
	2		2		<<		<< / Tune-
	3		3		>>		>> / Tune+
	CH + / Tracking/V-Lock +		CH+ / Page+		Stop		Stop / Hold
	4		4		Pause		Pause / Step / Freeze
	5		5		Play		Play / Slow
	6		6		i		Info / Angle
	CH - / Tracking/V-Lock -		CH- / Page-		Prog Check		Setup / OPT /
	7		7		Guide		Guide / EPG / -/-





Original	Recharge
Direct Navigator	D.Menu / Top
Left / <ll	Left
Up	Up
Enter / OK	OK
Right / ll>	Right
Functions	Menu / Home
Sub Menu	Smart / List
Down	Down
Return	Back / Return
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow / Create Chapter	Yellow / YouTube / Repeat
Blue / Manual	Blue / Prime Video / Random
Rec	Rec / Rec Mode
Rec Mode	Shift + Rec / Rec Mode
Ext Link	Sound / Title
Direct TV Rec	Zoom / Size

Original	Recharge
Text	Text / Goto
STTL	Subtitle / EQ
Display	Display / Media
Time Slip / << Jet Rew	Shift + << /

