 

























 
 










 

 





 
 






















Original	Rechange
 Power	 Power
 Open/Close	 Eject / Surround
 Home	 Shift + Menu /
 FM/AM	 Shift + 6
 AV	 AV / Input / RDS
 PIP	 Picture / Format
 1	 1
 2	 2
 3	 3
 Test Tone	 Text / Goto
 4	 4
 5	 5
 6	 6
 [...] / Subtitle	 Subtitle / EQ
 7	 7
 8	 8
 9	 9

Original	Rechange
 0	 0
 Title	 Shift + Sound / Title
 Marker	 Fav / Marker / PC
 Search	 Red / Netflix / Search
 Zoom	 Zoom / Size
 Audio/Mo./St.	 Audio / Lang I/II
 Sound	 Sound / Title
 XTS Pro	 Shift + Audio / Lang I/II
 Level/Delay	 Smart / List
 Menu/List	 Menu / Home
 PR/Preset+	 CH+ / Page+
 Up	 Up
 Setup	 Setup / OPT /
 Left/Tun-	 Left
 Memory/Enter	 OK
 Right/Tun+	 Right
 Display	 Display / Media





Original	Recharge	Original	Recharge
PR/Presets-	CH- / Page-	CHP ADD	Shift + Fav / Marker / PC
Down	Down	Repeat	Green / APP / Repeat
Return	Back / Return	Repeat A/B	Yellow / YouTube / Repeat
I<</Skip-	I<< / Preset-	Thumbnail	Shift + Guide / EPG / -/--
>>I/Skip+	>>I / Preset+	Timeshift	Info / Angle
Vol+	Vol+	Instant Skip	Guide / EPG / -/--
<</Scan-	<< / Tune-	Clear	Exit / Cancel / Clear
>>/Scan+	>> / Tune+	RDS/Resolution	Shift + AV / Input / RDS
Vol-	Vol-	PTY	D.Menu / Top
Pause/Step	Pause / Step / Freeze	ShowView	Shift + Smart / List
Play	Play / Slow	Tv/DVD	TV/Radio /
Stop	Stop / Hold		
Rec	Rec / Rec Mode		
Rec Mode	Shift + Rec / Rec Mode		
Timer Rec	Sleep / Timer		
Mute	Mute / Dimmer		
Dubbing	Blue / Prime Video / Random		

