



Original	Recharge
 Power Tv	 Shift + Power
 Volume+ Tv	 Vol+
 CH+ Tv	 Shift + CH+ /
 AV Tv	 Shift + AV / Input / RDS
 Volume- Tv	 Vol-
 CH- Tv	 Shift + CH- /
 Power VCR	 Power
 OSD/Display	 Display / Media
 Reset	 Back / Return
 Tracking-V-Lock	 CH+ / Page+
 Replay	 Blue / Prime Video / Random
 Audio	 Audio / Lang I/II
 AV Link	 AV / Input / RDS
 Tracking-V-Lock Down	 CH- / Page-
 Search	 Red / Netflix / Search
 I<< Index	 I<< / Preset-
 Index >>I	 >>I / Preset+

Original	Recharge
 Rec	 Rec / Rec Mode
 Menu	 Menu / Home
 Play	 Play / Slow
 Up	 Up
 Exit	 Exit / Cancel / Clear
 <<	 << / Tune-
 Left	 Left
 OK	 OK
 Right	 Right
 >>	 >> / Tune+
 I-Timer	 Smart / List
 Stop	 Stop / Hold
 Down	 Down
 Pause/Step	 Pause / Step / Freeze
 Prog/Check	 TV/Radio /
 Cancel	 Shift + Exit / Cancel / Clear
 SP/LP/EP	 Picture / Format





Original	Recharge
Timer	Sleep / Timer
Prog/Check Up	+ Shift + Up
Date+	1
On+	2
Off+	3
Prog/Check	+ Shift + Down
Date-	4
On-	5
Off-	6

Original	Recharge

