
























































































Original		Rechange		Original		Rechange	
	FL Dimmer		Mute / Dimmer		9		9
	On / Standby		Power		0		0
	Setup		Setup / OPT /		+10		Guide / EPG / -/-
	Display		Display / Media		T / Search		Red / Netflix / Search
	Zoom		Zoom / Size		Top Menu		D.Menu / Top
	3D		Shift + 3		Up		Up
	Angle		Info / Angle		Menu		Menu / Home
	Subtitle		Subtitle / EQ		Left		Left
	Audio		Audio / Lang I/II		Enter		OK
	1		1		Right		Right
	2		2		Clear		Exit / Cancel / Clear
	3		3		Down		Down
	4		4		Return		Back / Return
	5		5		REV		<< / Tune-
	6		6		Play		Play / Slow
	7		7		FWD		>> / Tune+
	8		8		Pause / Step		Pause / Step / Freeze





	Original	Recharge	Original	Recharge
	I<< Skip	 I<< / Preset-		
	Stop	 Stop / Hold		
	Skip >>I	 >>I / Preset+		
	Slow	 +  Shift + Play /		
	Random	 Blue / Prime Video / Random		
	Memory	 Smart / List		
	Repeat	 Green / APP / Repeat		
	A-B RPT	 Yellow / YouTube / Repeat		

