
 

 
 





 

 

 



 





 

 


 

 

 




 
 


 
 

 



 


 









Original		Recharge		Original		Recharge	
	Power		Power		Nicam		Audio / Lang I/II
	Mute		Mute / Dimmer		Menu		Menu / Home
	1		1		Up		Up
	2		2		Source		AV / Input / RDS
	3		3		Left		Left
	4		4		OK		OK
	5		5		Right		Right
	6		6		Down		Down
	7		7		Exit		Exit / Cancel / Clear
	8		8		Display		Display / Media
	9		9		Vol+		Vol+
	0		0		CH+		CH+ / Page+
	-/--	 + 	Shift + Guide / EPG / -/--		Vol-		Vol-
	Recall		Back / Return		List		Smart / List
	P.Mode		Picture / Format		FAV/List		Fav / Marker / PC
	S.Mode		Sound / Title		CH-		CH- / Page-
	Sleep		Sleep / Timer		Tv/Radio		TV/Radio /





	Original	Recharge	Original	Recharge
	EPG	Guide / EPG / -/--		
	Aspect	+  Shift + Picture / Format		
	Freeze	Pause / Step / Freeze		
	Index	Info / Angle		
	Cancel	+  Shift + Exit / Cancel / Clear		
	Subpage	Subtitle / EQ		
	Text	Text / Goto		
	Reveal	D.Menu / Top		
	Size	Zoom / Size		
	Hold	Stop / Hold		
	Mix	Setup / OPT /		
	Red	Red / Netflix / Search		
	Green	Green / APP / Repeat		
	Yellow	Yellow / YouTube / Repeat		
	Cyan	Blue / Prime Video / Random		

