



Original	Rechange
 Power	 Power
 Mute	 Mute / Dimmer
 Pause	 Pause / Step / Freeze
 Menu	 Menu / Home
 Scan	 Smart / List
 Up	 Up
 Info	 Info / Angle
 Left	 Left
 OK	 OK
 Right	 Right
 Exit	 Exit / Cancel / Clear
 Down	 Down
 Recall	 Fav / Marker / PC
 Vol+	 Vol+
 MP	 Display / Media
 Page+	 CH+ / Page+
 Vol-	 Vol-

Original	Rechange
 Page-	 CH- / Page-
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Red/FAV	 Red / Netflix / Search
 Green/SAT	 Green / APP / Repeat
 Yellow/Audio	 Yellow / YouTube / Repeat
 Blue/Tv/Radio	 Blue / Prime Video / Random

