
 

 






 

 



 




 


 

 








Original	Recharge
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 CMSS	 Smart / List
 Mute	 Mute / Dimmer
 Rec	 Rec / Rec Mode
 Vol-	 Vol-
 Vol+	 Vol+
 Stop	 Stop / Hold

Original	Recharge
 Eject	 Eject / Surround
 Play/Pause	 Play / Slow
 Slow I>	 Shift + Play /
 I</Previous	 I<< / Preset-
 >I/Next	 >>I / Preset+
 Pause/Step	 Pause / Step / Freeze
 EAX	 D.Menu / Top
 */Options	 Setup / OPT /
 Display	 Display / Media
 Return	 Back / Return
 Start	 Guide / EPG / -/-
 Cancel	 Exit / Cancel / Clear
 Up	 Up
 <<	 << / Tune-
 <<	 Left
 OK/Select	 OK
 >>	 >> / Tune+





Original		Recharge		Original		Recharge	
	>>		Right				
	Down		Down				

