



Original		Rechange		Original		Rechange	
	Sleep		Sleep / Timer		Volume+		Vol+
	Power		Power		CH/Page Down		CH- / Page-
	CBL/SAT		0		Mute		Mute / Dimmer
	Media Player		2		Volume-		Vol-
	Blu-ray		3		Info		Info / Angle
	Game		4		Option		Shift + Setup / OPT / Tools
	AUX1		5		Up		Up
	AUX2		7		Left		Left
	Phono		Guide / EPG / -/--		Enter		OK
	Tv Audio		1		Right		Right
	Tuner		6		Back		Back / Return
	USB		8		Down		Down
	Bluetooth		9		Setup		Setup / OPT /
	Internet Radio		Fav / Marker / PC		I<</Tune-		I<< / Preset-
	.:I.		Smart / List		Play		Play / Slow
	CH/Page Up		CH+ / Page+		Pause		Pause / Step / Freeze
	Eco		Display / Media		>>I/Tune+		>>I / Preset+



