







 


























 

 





Original	Rechange
 Power	 Power
 Mute	 Mute / Dimmer
 Source	 AV / Input / RDS
 P.Mode	 Picture / Format
 S.Mode	 Sound / Title
 I-II/Audio	 Audio / Lang I/II
 Sleep	 Sleep / Timer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0

Original	Rechange
 -/--/+10	 Guide / EPG / -/--
 QV	 Info / Angle
 Tv Menu	 Menu / Home
 Tv/Text	 Text / Goto
 Mix	 Setup / OPT /
 Call	 Back / Return
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 Down	 Down
 Vol-	 Vol-
 Vol+	 Vol+
 P-	 CH- / Page-
 P+	 CH+ / Page+
 Red/DVD Setup	 Red / Netflix / Search
 Green	 Green / APP / Repeat





Original		Recharge		Original		Recharge	
	Yellow		Yellow / YouTube / Repeat		<<		<< / Tune-
	Blue		Blue / Prime Video / Random		>>		>> / Tune+
	Subtitle		Subtitle / EQ				
	Pause		Pause / Step / Freeze				
	Play/Hold		Play / Slow				
	Zoom/Size		Zoom / Size				
	D.Disp/Reveal		Display / Media				
	D.Menu		D.Menu / Top				
	Up/Index DVD		Shift + Up				
	I<</Cancel		I<< / Preset-				
	>>I/Subpage		>>I / Preset+				
	Left DVD		Shift + Left				
	Enter DVD		Shift + OK				
	Right DVD		Shift + Right				
	Eject		Eject / Surround				
	Stop		Stop / Hold				
	Down DVD		Shift + Down				

