







































	Original	Recharge		Original	Recharge
	Bluetooth	 9	9		Pause / Step / Freeze
	Net	 Fav / Marker / PC	Fav / Marker / PC		>> / Preset+
	Power	 Power	Power		
	USB	 8	8		
	OPT	 Setup / OPT /	Setup / OPT /		
	AUX	 7	7		
	Vol-	 Vol-	Vol-		
	Vol+	 Vol+	Vol+		
	Mute	 Mute / Dimmer	Mute / Dimmer		
	1	 1	1		
	2	 2	2		
	3	 3	3		
	4	 4	4		
	5	 5	5		
	6	 6	6		
	I<<	 I<< / Preset-	I<< / Preset-		
	Play	 Play / Slow	Play / Slow		

