 

 

 





 













 

 

 



 

 





 

 

 

 

 



 



 

 



 

 







Original	Rechange	Original	Rechange
 Power	 Power	 Info	 Info / Angle
 Mute	 Mute / Dimmer	 Menu	 Menu / Home
 1	 1	 Up	 Up
 2	 2	 Exit	 Exit / Cancel / Clear
 3	 3	 Left	 Left
 Mark	 Fav / Marker / PC	 OK	 OK
 4	 4	 Right	 Right
 5	 5	 Text	 Text / Goto
 6	 6	 Down	 Down
 Tv/Radio	 TV/Radio /	 EPG	 Guide / EPG / -/-
 7	 7	 <<	 << / Tune-
 8	 8	 Stop	 Stop / Hold
 9	 9	 Play	 Play / Slow
 Source	 AV / Input / RDS	 Pause	 Pause / Step / Freeze
 Timeshift	 Smart / List	 I<<	 I<< / Preset-
 0	 0	 Rec	 Rec / Rec Mode
 Recall	 Back / Return	 Audio/Lang	 Audio / Lang I/II





Original	Recharge	Original	Recharge
	TUNE+  >> / Tune+		
PAGE UP 	SHIFT +  Shift + CH+ /		
PAGE DOWN 	SHIFT +  Shift + CH- /		
	PRESET+  >>  / Preset+		
VOL- 	VOL  Vol-		
VOL+ 	+ VOL  Vol+		
CH- 	CH PAGE  CH- / Page-		
CH+ 	+ CH PAGE  CH+ / Page+		
HDMI 	SHIFT +  Shift + 0		
ZOOM 	SIZE  Zoom / Size		
SUBTITLE 	EQ  Subtitle / EQ		
AUTO/GOTO 	TOP MENU D.MENU  D.Menu / Top		
Red 	NETFLIX SEARCH  Red / Netflix / Search		
Green 	APP REPEAT  Green / APP / Repeat		
Yellow 	YouTube REPEAT A-B  Yellow / YouTube / Repeat		
Blue 	Prime Video RANDOM  Blue / Prime Video / Random		

