 

 
 

















 



 








Original	Rechange
 Power	 Power
 TV	 TV/Radio /
 Caption	 Display / Media
 AV Mode	 Smart / List
 [ ]/Ratio	 Subtitle / EQ
 Input	 AV / Input / RDS
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 --/List	 Guide / EPG / --
 0	 0

Original	Rechange
 Flahsbk	 Zoom / Size
 Vol+	 Vol+
 FAV	 Fav / Marker / PC
 CH/Page+	 CH+ / Page+
 Vol-	 Vol-
 Audio	 Audio / Lang I/II
 CH/Page-	 CH- / Page-
 Mute	 Mute / Dimmer
 Picture	 Picture / Format
 Info	 Info / Angle
 Sound	 Sound / Title
 Settings	 Setup / OPT /
 Up	 Up
 Q.Menu	 D.Menu / Top
 Left	 Left
 OK	 OK
 Right	 Right





Original	Recharge	Original	Recharge
 Back	 Back / Return		
 Down	 Down		
 Exit	 Exit / Cancel / Clear		
 Sleep	 Sleep / Timer		
 Stop	 Stop / Hold		
 <<	 << / Tune-		
 Play	 Play / Slow		
 Pause	 Pause / Step / Freeze		
 >>	 >> / Tune+		
 .	 Red / Netflix / Search		
 ..	 Green / APP / Repeat		
 :::	 Yellow / YouTube / Repeat		
 ::::	 Blue / Prime Video / Random		

