



| Original     | Recharge              |
|--------------|-----------------------|
| Power        | Power                 |
| Freeze       | Pause / Step / Freeze |
| Auto Setup   | Setup / OPT /         |
| Shutter      | AV / Input / RDS      |
| Menu         | Menu / Home           |
| Up           | Up                    |
| Left         | Left                  |
| Enter        | OK                    |
| Right        | Right                 |
| Down         | Down                  |
| Vol+         | Vol+                  |
| Index Window | Smart / List          |
| D.Zoom+      | CH+ / Page+           |
| Vol-         | Vol-                  |
| STD          | Display / Media       |
| D.Zoom-      | CH- / Page-           |
| Input Video  | 4                     |

| Original  | Recharge           |
|-----------|--------------------|
| Input RGB | Guide / EPG / -/-- |
|           |                    |
|           |                    |
|           |                    |
|           |                    |
|           |                    |
|           |                    |
|           |                    |
|           |                    |
|           |                    |
|           |                    |
|           |                    |
|           |                    |
|           |                    |
|           |                    |

