



Original	Rechange
Power	Power
Source	AV / Input / RDS
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
TTX/MIX	Text / Goto
0	0
PRE-CH	Fav / Marker / PC
Vol+	Vol+
Mute	Mute / Dimmer
CH+	CH+ / Page+

Original	Rechange
Vol-	Vol-
CH List	Smart / List
CH-	CH- / Page-
Netflix	Shift + Red / Netflix /
Home	Menu / Home
prime video	Shift + Blue / Prime
Samsung TV	TV/Radio /
Up	Up
Disney+	Picture / Format
Left	Left
Enter	OK
Right	Right
Return	Back / Return
Down	Down
Exit	Exit / Cancel / Clear
Red	Red / Netflix / Search
Green	Green / APP / Repeat





Original	Recharge	Original	Recharge
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Settings		Setup / OPT /
	Info		Info / Angle
	AD/SUBT.		Subtitle / EQ
	Stop		Stop / Hold
	<<		<< / Tune-
	l<<		l<< / Preset-
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	>>		>> / Tune+
	>>l		>>l / Preset+

Original	Recharge

