



Original		Recharge		Original		Recharge	
	Power		Power		8		8
	Power Tv		Shift + Power		9		9
	Vol+ Tv		Vol+		ShowView		Shift + Display / Media
	CH+ Tv		Shift + CH+ /		Delete		Shift + Back / Return
	Select Drive		Shift + Smart / List		0		0
	AV Tv		Shift + AV / Input / RDS		Input Select		AV / Input / RDS
	Vol. Tv		Vol-		Prog/Check		Fav / Marker / PC
	CH- Tv		Shift + CH- /		I<<		I<< / Preset-
	1		1		I>>		I>> / Preset+
	2		2		<<		<< / Tune-
	3		3		>>		>> / Tune+
	CH+		CH+ / Page+		Stop		Stop / Hold
	4		4		Pause		Pause / Step / Freeze
	5		5		Play		Play / Slow
	6		6		i		Info / Angle
	CH-		CH- / Page-		Exit		Exit / Cancel / Clear
	7		7		Guide		Guide / EPG / -/-





Original	Rechange
Direct Navigator	Smart / List
Left	Left
Up	Up
OK	OK
Right	Right
Function Menu	Menu / Home
Down	Down
Option	Setup / OPT /
Return	Back / Return
Red	Red / Netflix / Search
Green/Chapter	Green / APP / Repeat
Yellow/Manual Skip -10s	Yellow / YouTube / Repeat
Blue/Manual Skip +60s	Blue / Prime Video / Random
Rec	Rec / Rec Mode
Rec Mode	Shift + Rec / Rec Mode
Ext Link	Text / Goto
Direct Tv Rec	TV/Radio /

Original	Rechange
Audio	Audio / Lang I/II
Status	Subtitle / EQ
Display	Display / Media
Time Slip	Sleep / Timer



Program