 



 



 



 







 



 













Original	Recharge
 Power	 Power
 Mute	 Mute / Dimmer
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 <</ <<	 << / Tune-
 >>/>>	 >> / Tune+
 CC	 Subtitle / EQ
 3D	 Zoom / Size
 Sleep	 Sleep / Timer
 Content	 TV/Radio /
 Tools	 Setup / OPT /
 Source	 AV / Input / RDS
 Menu	 Menu / Home
 Up	 Up
 Info	 Info / Angle
 Left	 Left

Original	Recharge
 Enter	 OK
 Right	 Right
 Exit	 Exit / Cancel / Clear
 Down	 Down
 PRE-CH	 Fav / Marker / PC
 Vol+	 Vol+
 CH List	 Smart / List
 CH+	 CH+ / Page+
 Vol-	 Vol-
 CH-	 CH- / Page-
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7





Original		Recharge		Original		Recharge	
	8		8				
	9		9				
	--		Guide / EPG / -/--				
	0		0				
	Red		Red / Netflix / Search				
	Green/Alarm		Green / APP / Repeat				
	Yellow		Yellow / YouTube / Repeat				
	Blue		Blue / Prime Video / Random				
	Home		Shift + Menu /				
	Return		Back / Return				

