



| Original       | Recharge                    |
|----------------|-----------------------------|
| Power          | Power                       |
| Mute           | Mute / Dimmer               |
| Band/Tuner     | Smart / List                |
| Timer/Clock    | Shift + Sleep / Timer       |
| Timer On/Off   | Shift + Power               |
| AUX            | 7                           |
| Program/Set    | Menu / Home                 |
| MO/ST/ Rep.A-B | Shift + Smart / List        |
| Sleep          | Sleep / Timer               |
| EQ/S.Bass      | Audio / Lang I/II           |
| SRS Wow        | AV / Input / RDS            |
| Rec/Pause      | Rec / Rec Mode              |
| Random         | Blue / Prime Video / Random |
| Counter Reset  | Exit / Cancel / Clear       |
| I<< CD         | I<< / Preset-               |
| Stop CD        | Stop / Hold                 |
| Play/Pause CD  | Play / Slow                 |

| Original      | Recharge             |
|---------------|----------------------|
| >>I CD        | >>I / Preset+        |
| +10/Tuning    | Guide / EPG / -/-    |
| Tuning/Album+ | CH+ / Page+          |
| Vol+          | Vol+                 |
| Repeat        | Green / APP / Repeat |
| Tuning/Album- | CH- / Page-          |
| Vol-          | Vol-                 |
| << Tape       | << / Tune-           |
| Stop Tape     | Shift + Stop /       |
| <> Tape       | D.Menu / Top         |
| >> Tape       | >> / Tune+           |
|               |                      |
|               |                      |
|               |                      |
|               |                      |
|               |                      |
|               |                      |
|               |                      |
|               |                      |
|               |                      |

