



 


 




 






Original	Rechange
 Mute	 Mute / Dimmer
 Power	 Power
 TV	 Smart / List
 Tv/Rad	 TV/Radio /
 Audio	 Audio / Lang I/II
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Text	 Text / Goto
 0	 0
 Sub	 Subtitle / EQ

Original	Rechange
 Menu	 Menu / Home
 Exit	 Exit / Cancel / Clear
 EPG	 Guide / EPG / -/--
 ALT	 Setup / OPT /
 Up	 Up
 CH+	 CH+ / Page+
 Left	 Left
 Vol-	 Vol-
 OK	 OK
 Vol+	 Vol+
 Right	 Right
 Down	 Down
 CH-	 CH- / Page-
 Freeze	 Pause / Step / Freeze
 Page-	 Shift + CH- /
 Page+	 Shift + CH+ /
 Browse	 Display / Media





	Original	Recharge	Original	Recharge
	Red	 Red / Netflix / Search		
	Green	 Green / APP / Repeat		
	Yellow	 Yellow / YouTube / Repeat		
	Blue	 Blue / Prime Video / Random		
	i	 Info / Angle		

