







 

 

 

 

 
 
 


 


 

 

 





| Original | Rechange |
|--------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------|
|  Power |  Power |
|  Play |  Play / Slow |
|  Pause |  Pause / Step / Freeze |
|  Stop |  Stop / Hold |
|  << |  << / Tune- |
|  >> |  >> / Tune+ |
|  I<</Tune- |  I<< / Preset- |
|  >>I/Tune+ |  >>I / Preset+ |
|  Bass Boost |  Sound / Title |
|  Audio In |  Audio / Lang I/II |
|  Sleep |  Sleep / Timer |
|  FM Mode |  TV/Radio / |
|  Options |  D.Menu / Top |
|  * |  Setup / OPT / |
|  Tuning Mode |  Text / Goto |
|  Tuner Memory |  AV / Input / RDS |
|  Timer Menu |  Menu / Home |

| Original | Rechange |
|--------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------|
|  Up/Folder+ |  Up |
|  Left |  Left |
|  OK |  OK |
|  Right |  Right |
|  Clear |  Exit / Cancel / Clear |
|  Down/Folder- |  Down |
|  Return |  Back / Return |
|  Vol+ |  Vol+ |
|  Play Mode |  Smart / List |
|  Bass+ |  CH+ / Page+ |
|  Vol- |  Vol- |
|  Display |  Display / Media |
|  Bass- |  CH- / Page- |
|  CD |  3 |
|  Tuner |  6 |
|  USB |  8 |
|  Bluetooth |  9 |



