






 
 

 



 



 
 



 














 











Original		Recharge		Original		Recharge	
	Power		Power		0		0
	[=]		Text / Goto		Red		Red / Netflix / Search
	Enter		OK		Green		Green / APP / Repeat
	Vol+		Vol+		Yellow		Yellow / YouTube / Repeat
	Prog+		CH+ / Page+		Blue		Blue / Prime Video / Random
	Vol-		Vol-		Repeat		Shift + Green / APP /
	Prog-		CH- / Page-				
	1		1				
	2		2				
	3		3				
	4		4				
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				
	-/--		Guide / EPG / -/--				




 


Original	Recharge
Open/Close	Eject / Surround
Display	Display / Media
Power	Power
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
Wide Mode	Zoom / Size
Tv/Video	TV/Radio /
-/--/Search Mode	Guide / EPG / -/--
0	0
Clear	Exit / Cancel / Clear

Original	Recharge
Time	Sleep / Timer
Red/Shuffle	Red / Netflix / Search
Green/Program	Green / APP / Repeat
Repeat	Shift + Green / APP /
A-B	Shift + Yellow / YouTube /
Yellow/Audio	Yellow / YouTube / Repeat
Blue/Angle	Blue / Prime Video / Random
[=]/Subtitle	Text / Goto
Subtitle On/Off	Subtitle / EQ
AV Center	AV / Input / RDS
< Step	Shift + Left
Step II >	Shift + Right
< Slow	CH- / Page-
Slow II >	CH+ / Page+
AV Vol+	Vol+
I<</Prev	I<< / Preset-
>>I/Next	>>I / Preset+





Original	Recharge	Original	Recharge
 << Scan	 << / Tune-		
 >> Scan	 >> / Tune+		
 AV Vol-	 Vol-		
 Play	 Play / Slow		
 Pause	 Pause / Step / Freeze		
 Stop	 Stop / Hold		
 Set Up	 Setup / OPT /		
 Title	 Sound / Title		
 DVD Menu	 D.Menu / Top		
 Return	 Back / Return		
 Tv/DVD	 Shift + TV/Radio / Program		
 Up	 Up		
 Left	 Left		
 Enter	 OK		
 Right	 Right		
 Down	 Down		

Original	Recharge

