




 










 



 



 























 


 



 

 



 







Original		Rechange		Original		Rechange	
	Power		Power		←PR		I<< / Preset-
	Mute		Mute / Dimmer		OK		OK
	1		1		Vol+		Vol+
	2		2		Right		Right
	3		3		Menu		Menu / Home
	4		4		PR-		CH- / Page-
	5		5		Down		Down
	6		6		FAV		Fav / Marker / PC
	7		7		<<		<< / Tune-
	8		8		>>		>> / Tune+
	9		9		Info		Info / Angle
	PR+		CH+ / Page+		SAT		Shift + 0
	0		0		Tv/Av		AV / Input / RDS
	EPG		Guide / EPG / -/-		Tv/Radio		TV/Radio /
	Up		Up		Exit		Exit / Cancel / Clear
	Left		Left		UHF		Display / Media
	Vol-		Vol-		Red		Red / Netflix / Search





	Original	Rechange	Original	Rechange
	Audio	 Audio / Lang I/II		
	Green	 Green / APP / Repeat		
	Position	 Picture / Format		
	Yellow	 Yellow / YouTube / Repeat		
	[...]	 Subtitle / EQ		
	Blue	 Blue / Prime Video / Random		
	Audio L/R	 Sound / Title		

