





| Original | | Recharge | | Original | | Recharge | |
|---|------------|---|------------------------|---|-------|---|-----------------------|
|  | Input |  | AV / Input / RDS |  | Play |  | Play / Slow |
|  | Power |  | Power |  | Pause |  | Pause / Step / Freeze |
|  | Auto Sound |  | Sound / Title |  | I<< |  | I<< / Preset- |
|  | Standard |  | Zoom / Size |  | >>I |  | >>I / Preset+ |
|  | Cinema |  | Picture / Format | | | | |
|  | Music |  | TV/Radio / | | | | |
|  | Voice |  | Display / Media | | | | |
|  | Night |  | Exit / Cancel / Clear | | | | |
|  | Vol+ |  | Vol+ | | | | |
|  | Vol- |  | Vol- | | | | |
|  | Indicator |  | Info / Angle | | | | |
|  | Mute |  | Mute / Dimmer | | | | |
|  | Play Mode |  | Red / Netflix / Search | | | | |
|  | Audio |  | Audio / Lang I/II | | | | |
|  | Up |  | Up | | | | |
|  | Enter |  | OK | | | | |
|  | Down |  | Down | | | | |

