







 













































Original	Recharge	Original	Recharge
 Input	 AV / Input / RDS	 Play	 Play / Slow
 Power	 Power	 Pause	 Pause / Step / Freeze
 Auto Sound	 Sound / Title	 I<<	 I<< / Preset-
 Standard	 Zoom / Size	 >>I	 >>I / Preset+
 Cinema	 Picture / Format		
 Music	 TV/Radio /		
 Voice	 Display / Media		
 Night	 Exit / Cancel / Clear		
 Vol+	 Vol+		
 Vol-	 Vol-		
 Indicator	 Info / Angle		
 Mute	 Mute / Dimmer		
 Play Mode	 Red / Netflix / Search		
 Audio	 Audio / Lang I/II		
 Up	 Up		
 Enter	 OK		
 Down	 Down		

Original	Recharge
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+

