
 






Original	Rechange	Original	Rechange
TV/SAT	AV / Input / RDS	OK	OK
Standby	Power	Menu / Home	Menu / Home
1	1	Right / Vol+	Right
2	2	Right / Vol+	Vol+
3	3	Down	Down
4	4	CH/Page-	CH- / Page-
5	5	CH/Page+	CH+ / Page+
6	6	List	Smart / List
7	7	i	Info / Angle
8	8	P.Guide	Guide / EPG / -/--
9	9	FAV	Fav / Marker / PC
ESC TXT	Text / Goto	Mute	Mute / Dimmer
0 +/-	0	Audio	Audio / Lang I/II
Help	D.Menu / Top	Radio	TV/Radio /
Up	Up	Zoom	Zoom / Size
Left / Vol-	Left	Red / Add / East	Red / Netflix / Search
Left / Vol-	Vol-	Green / Lang / Locsat	Shift + Audio / Lang I/II





Original		Recharge		Original		Recharge	
	Green / Lang / Locsat		Green / APP / Repeat				
	Yellow/Delete A/Focus		Yellow / YouTube / Repeat				
	Blue/West		Blue / Prime Video / Random				

