























 

 

 

 







Original	Recharge
 Power	 Power
 Menu	 Menu / Home
 Picture	 Picture / Format
 Input Tv	 TV/Radio /
 Input AV	 AV / Input / RDS
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 i	 Info / Angle
 X/Exit	 Exit / Cancel / Clear
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Option	 Setup / OPT /
 Down	 Down

Original	Recharge
 Back/Return	 Back / Return
 Netflix	 Shift + Red / Netflix /
 Home	 Shift + Menu /
 Guide	 Guide / EPG / -/-
 Mute	 Mute / Dimmer
 Text	 Text / Goto
 STTL	 Subtitle / EQ
 List/Provider	 Smart / List
 Vol+	 Vol+
 CH+	 CH+ / Page+
 Vol-	 Vol-
 CH-	 CH- / Page-
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5





Original	Recharge
6 mno	TUNER 6
7 pqrs	AUX - HDD 7
8 tuv	USB 8
9 wxyz	BLUETOOTH 9
? eHELP	TOP MENU D.MENU D.Menu / Top
0	HDMI - BAT 0
Recall	PC FAV MARKER Fav / Marker / PC
<<	TUNE- << / Tune-
Play	SLOW Play / Slow
>>	TUNE+ >> / Tune+
I<<	PRESET- I<< / Preset-
Pause	STEP - FREEZE Pause / Step / Freeze
>>I	PRESET+ >>I / Preset+
My APP	SHIFT + APP REPEAT Shift + Green / APP /
Stop	HOLD Stop / Hold
Rec	REC MODE Rec / Rec Mode

Original	Recharge

