 


Original	Rechange
 Power AMP	 Power
 Power Audio	 Shift + Power
 1	 1
 2	 2
 3	 3
 Disc	 Eject / Surround
 4	 4
 5	 5
 6	 6
 ≥10	 Guide / EPG / -/--
 7	 7
 8	 8
 9	 9
 0	 0
 Up	 Up
 Menu	 Menu / Home
 Left	 Left

Original	Rechange
 Select	 OK
 Right	 Right
 Down	 Down
 Display	 Display / Media
 Band	 Smart / List
 CH-	 CH- / Page-
 CH+	 CH+ / Page+
 Tape 1	 Shift + 5
 Tape 2	 Shift + 4
 CD	 Shift + 3
 Tuner	 Shift + 6
 MD	 Shift + 8
 DVD	 Shift + 2
 Aux	 Shift + 7
 Phono	 Shift + 1
 Muting	 Mute / Dimmer
 Volume-	 Vol-



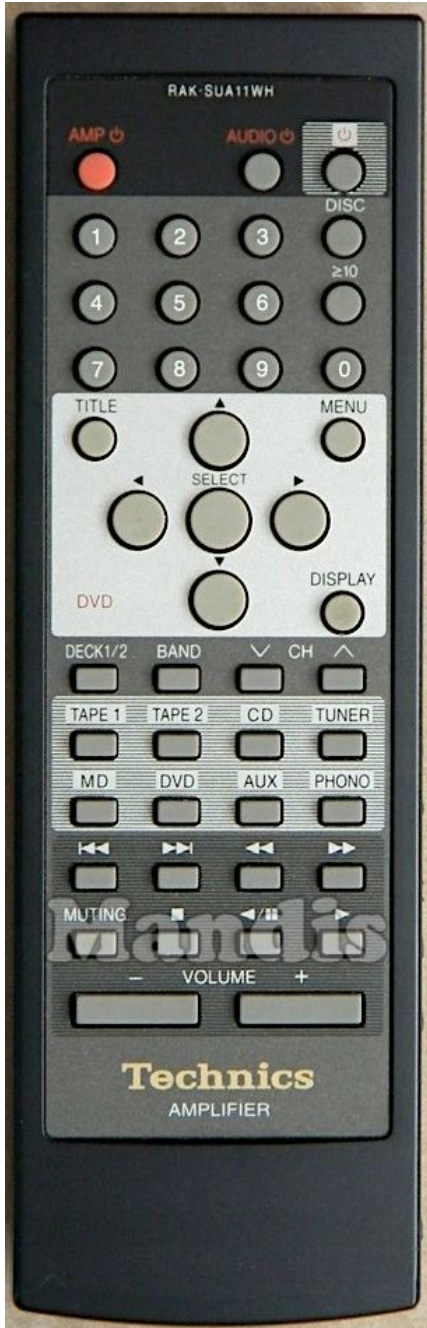

Original

Recharge

 
	Original	Recharge
LUMEN +	Volume+	+ VOL

Original

Recharge

	Original	Recharge

 


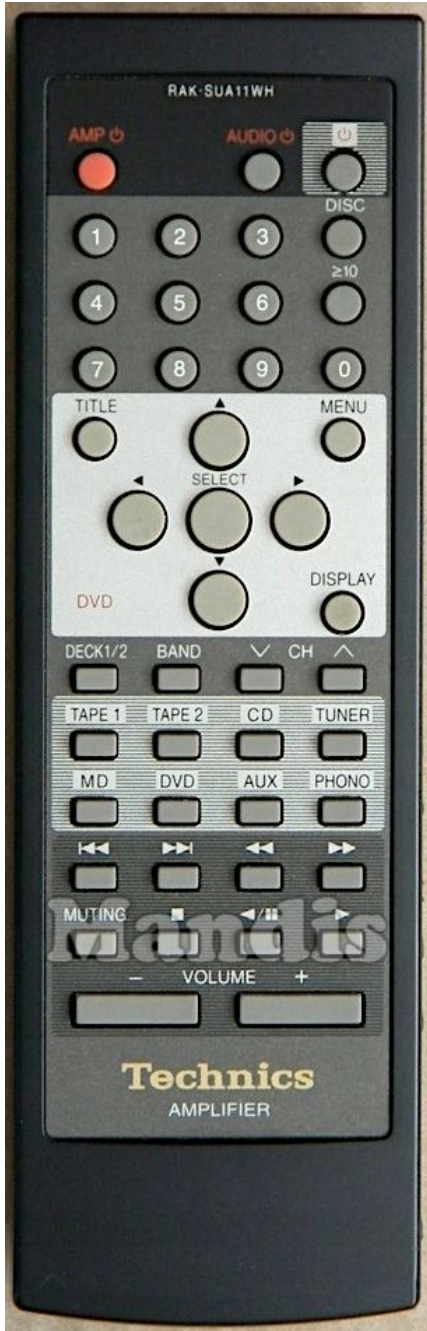

Original	Rechange
 Power DVD	 Power
 1	 1
 2	 2
 3	 3
 Disc	 Eject / Surround
 4	 4
 5	 5
 6	 6
 >10	 Guide / EPG / -/-
 7	 7
 8	 8
 9	 9
 0	 0
 Up	 Up
 Menu	 Menu / Home
 Left	 Left
 Select	 OK

Original	Rechange
 Right	 Right
 Down	 Down
 Display	 Display / Media
 Band	 Smart / List
 CH-	 CH- / Page-
 CH+	 CH+ / Page+
 Tape	 Shift + 5
 CD	 Shift + 3
 DVD	 Shift + 2
 I<</<<	 I<< / Preset-
 >>/>>I	 >>I / Preset+
 Muting	 Mute / Dimmer
 Stop	 Stop / Hold
 Play	 Play / Slow
 Volume-	 Vol-
 Volume+	 Vol+



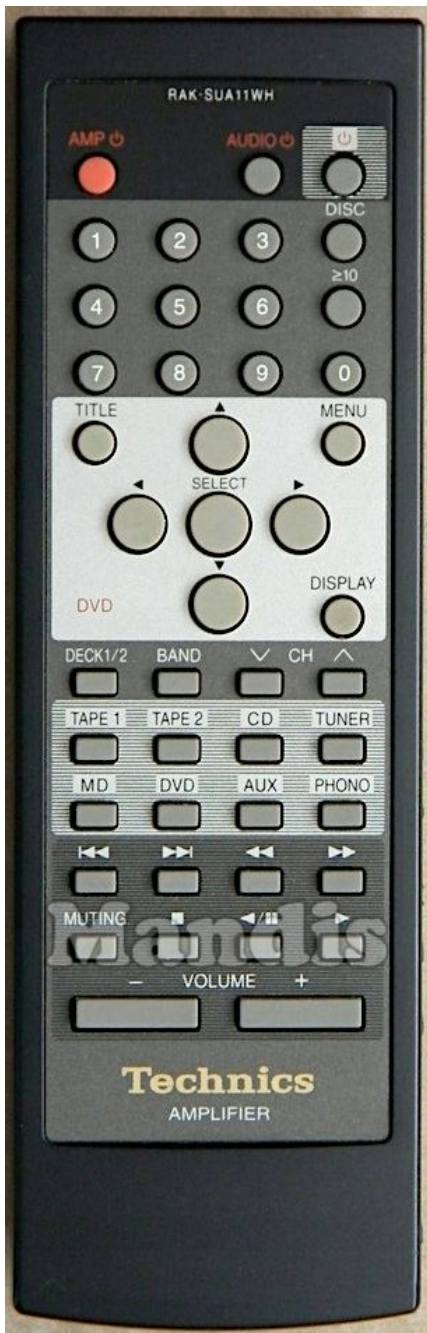

Original	Rechange
 Power CD	 Power
 1	 1
 2	 2
 3	 3
 Disc	 Eject / Surround
 4	 4
 5	 5
 6	 6
 >=10	 Guide / EPG / -/--
 7	 7
 8	 8
 9	 9
 0	 0
 CD	 Shift + 3
 TUNER	 Shift + 6
 <<	 << / Preset-
 >>	 >> / Preset+

Original	Rechange
 <<	 << / Tune-
 >>	 >> / Tune+
 Muting	 Mute / Dimmer
 Stop	 Stop / Hold
 Pause	 Pause / Step / Freeze
 Play	 Play / Slow
 Volume-	 Vol-
 Volume+	 Vol+

