









 

 

 

 

 



 



 



 



 

 

 



 



 



 

 

 



 



 



 





Original		Recharge		Original		Recharge	
	Power		Power		Smart Key		Shift + Smart / List
	Mute		Mute / Dimmer		CH-		CH- / Page-
	1		1		Info		Info / Angle
	2		2		Source		AV / Input / RDS
	3		3		Return		Back / Return
	4		4		Menu		Menu / Home
	5		5		Exit		Exit / Cancel / Clear
	6		6		Up		Up
	7		7		Left / Zoom-		Left
	8		8		OK		OK
	9		9		Right / Zoom+		Right
	ECO		Display / Media		Rec		Rec / Rec Mode
	0		0		Down		Down
	EPG		Guide / EPG / -/--		TimeShift		Sleep / Timer
	Vol+		Vol+		Text		Text / Goto
	CH+		CH+ / Page+		Subtitle		Subtitle / EQ
	Vol-		Vol-		List		Smart / List





Original	Recharge	Original	Recharge
Fav	Fav / Marker / PC		
Red	Red / Netflix / Search		
Green	Green / APP / Repeat		
Yellow	Yellow / YouTube / Repeat		
Blue / Lang	Shift + Blue / Prime		
Blue / Lang	Blue / Prime Video / Random		

