 



 








 



















 












	Original	Rechange		Original	Rechange
	 Power	 Power		 Vol+	 Vol+
	 Sub-T	 Subtitle / EQ		 FAV	 Fav / Marker / PC
	 Lang	 Audio / Lang I/II		 Down/CH-	 Down
	 Mute	 Mute / Dimmer		 Tv/Radio	 TV/Radio /
	 EPG	 Guide / EPG / -/--		 1	 1
	 Goto	 Shift + Text /		 2	 2
	 Page+	 CH+ / Page+		 3	 3
	 TTX	 Text / Goto		 Recall	 Back / Return
	 Repeat	 Shift + Green / APP /		 4	 4
	 Page-	 CH- / Page-		 5	 5
	 Menu	 Menu / Home		 6	 6
	 Up/CH+	 Up		 Info	 Info / Angle
	 Exit	 Exit / Cancel / Clear		 7	 7
	 Vol-	 Vol-		 8	 8
	 Left	 Left		 9	 9
	 OK	 OK		 0	 0
	 Right	 Right		 <<	 << / Tune-



