 



 








 


















	Original	Rechange	Original	Rechange
	Power			Vol+
	Sub-T			FAV
	Lang			Down/CH-
	Mute			Tv/Radio
	EPG			1
	Goto			2
	Page+			3
	TTX			Recall
	Repeat			4
	Page-			5
	Menu			6
	Up/CH+			Info
	Exit			7
	Vol-			8
	Left			9
	OK			0
	Right			<< / Tune-



