



	Original	Rechange	Original	Rechange
	Power			OK
	Phono			Left
	Volume-			Right
	Volume+			<< / Tune-
	Pause CD			>> / Tune+
	Stop CD			
	Disc CD			
	Play CD			
	I<< CD			
	>>I CD			
	< Deck II			
	Deck II >			
	Pause Deck II			
	Stop Deck II			
	<< Deck II			
	>> Deck II			
	Rec Deck II			

