
















































Original	Rechange	Original	Rechange
On/Off	 Power	Info	 Info / Angle
Mute	 Mute / Dimmer	Menu Left	 Left
Txt Stop	 Stop / Hold	OK Enter	 OK
Contrast-	 I<< / Preset-	Menu Right	 Right
Contrast+	 >>I / Preset+	Menu Off	 Exit / Cancel / Clear
Menu audio	 Audio / Lang I/II	Menu Down	 Down
Subt.List	 Subtitle / EQ	Back	 Back / Return
Surround	 Eject / Surround	Volume+	 Vol+
Txt Expand	 Zoom / Size	Reveal	 Smart / List
Sleep Timer	 Sleep / Timer	Chan.Up	 CH+ / Page+
Return TV	 TV/Radio /	Volume-	 Vol-
Menu video	 D.Menu / Top	Display	 Display / Media
Update	 Setup / OPT /	Chan.Down	 CH- / Page-
Text	 Text / Goto	1	 1
TV/AV	 AV / Input / RDS	2	 2
Menu	 Menu / Home	3	 3
Menu Up	 Up	4	 4



Original	Recharge	Original	Recharge
5	 5		
6	 6		
7	 7		
8	 8		
9	 9		
Guide -/-- 1.	 Guide / EPG / -/--		
0/10	 0		
2.Fav P/C 2.	 Fav / Marker / PC		
Red	 Red / Netflix / Search		
Green	 Green / APP / Repeat		
Yellow	 Yellow / YouTube / Repeat		
Blue	 Blue / Prime Video / Random		
Mix Scan	 Shift + Text /		

