



Original	Recharge	Original	Recharge
 Power	 Power	 Sub-T	 Subtitle / EQ
 Mute	 Mute / Dimmer	 EPG	 Guide / EPG / -/-
 1	 1	 FAV	 Fav / Marker / PC
 2	 2	 Menu	 Menu / Home
 3	 3	 Exit	 Exit / Cancel / Clear
 Tv/Radio	 TV/Radio /	 Up	 Up
 4	 4	 CH+	 CH+ / Page+
 5	 5	 Left	 Left
 6	 6	 Vol-	 Vol-
 Info	 Info / Angle	 OK/List	 OK
 7	 7	 Right	 Right
 8	 8	 Vol+	 Vol+
 9	 9	 CH-	 CH- / Page-
 Audio	 Audio / Lang I/II	 Down	 Down
 Recall	 Back / Return	 <<	 << / Tune-
 0	 0	 >>	 >> / Tune+
 Goto	 Shift + Goto Text / Goto	 >>I	 >>I / Preset+

Goto





Original	Recharge
 I<<	 I<< / Preset-
 Rec	 Rec / Rec Mode
 Play	 Play / Slow
 Stop	 Stop / Hold
 PVR	 Setup / OPT /
 TXT	 Text / Goto
 Pause	 Pause / Step / Freeze
 Repeat	 Shift + Green / APP /
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random

Original	Recharge

