



Original	Rechange	Original	Rechange
Power	Power	Angle/Audio	Audio / Lang I/II
Open/Close	Eject / Surround	Angle/Audio	Info / Angle
1	1	Prog/Repeat	Green / APP / Repeat
2	2	Prog/Repeat	TV/Radio /
3	3	Setup	Setup / OPT /
4	4	Stop	Stop / Hold
5	5	Play	Play / Slow
6	6	Pause	Pause / Step / Freeze
7	7	Left	Left
8	8	Up	Up
9	9	Right	Right
Menu/Zoom	Zoom / Size	OK	OK
Menu/Zoom	Menu / Home	Down	Down
0	0	<<	<< / Tune-
USB	Shift +  8	>>	>> / Tune+
Title/Subtitle	Sound / Title	Vol+	Vol+
Title/Subtitle	Subtitle / EQ	I<<	I<< / Preset-

Original	Rechange	Original	Rechange
Angle/Audio	Audio / Lang I/II	Angle/Audio	Info / Angle
Angle/Audio	Info / Angle	Prog/Repeat	Green / APP / Repeat
Prog/Repeat	TV/Radio /	Prog/Repeat	TV/Radio /
Setup	Setup / OPT /	Setup	Setup / OPT /
Stop	Stop / Hold	Stop	Stop / Hold
Play	Play / Slow	Play	Play / Slow
Pause	Pause / Step / Freeze	Pause	Pause / Step / Freeze
Left	Left	Left	Left
Up	Up	Up	Up
Right	Right	Right	Right
OK	OK	OK	OK
Down	Down	Down	Down
<<	<< / Tune-	<<	<< / Tune-
>>	>> / Tune+	>>	>> / Tune+
Vol+	Vol+	Vol+	Vol+
I<<	I<< / Preset-	I<<	I<< / Preset-





Original	Recharge
>>	>>  / Preset+
Vol-	Vol-
Mute	Mute / Dimmer
Goto	Text / Goto
Display	Display / Media

Original	Recharge

