















 




 













Original	Rechange
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Recall	 Back / Return
 0	 0
 Source	 AV / Input / RDS
 Vol+	 Vol+
 A/D/Content Menu	 Smart / List
 P+	 CH+ / Page+
 Vol-	 Vol-

Original	Rechange
 Mute	 Mute / Dimmer
 P-	 CH- / Page-
 Menu/DVD	 Menu / Home
 Exit/Return	 Exit / Cancel / Clear
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Guide/Top	 Guide / EPG / -/--
 Down	 Down
 Tv/FAV/Radio/Set	 TV/Radio /
 Tv/FAV/Radio/Set	 Fav / Marker / PC
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 [<>]	 Picture / Format



 













 

 

 











 





 







 



 







 













Original	Rechange	Original	Rechange
 ←[/]→	 Display / Media		
 [i+] / [≡i]	 Info / Angle		
 Text	 Text / Goto		
 Audio	 Audio / Lang I/II		
 Subtitle	 Subtitle / EQ		
 Eject	 Eject / Surround		
 O)I/II	 Shift + Audio / Lang I/II		
 Stop	 Stop / Hold		
 Play/[≡o]	 Play / Slow		
 II/II>/[▼]	 Pause / Step / Freeze		
 I<</[≡?]	 I<< / Preset-		
 <</[≡+]	 << / Tune-		
 >>/[≡◇]	 >> / Tune+		
 >>I/[O]/[≡X]	 >>I / Preset+		





Original	Recharge	Original	Recharge
 Power	 Power	 Up	 Up
 1	 1	 Left	 Left
 2	 2	 OK	 OK
 3	 3	 Right	 Right
 4	 4	 Guide/Top	 D.Menu / Top
 5	 5	 Down	 Down
 6	 6	 Tv/FAV/Radio/Set	 Setup / OPT /
 7	 7	 [<>]	 Picture / Format
 8	 8	 ←[/]→	 Display / Media
 9	 9	 [i+]/[≡i]	 Info / Angle
 0	 0	 Text	 Text / Goto
 Source	 AV / Input / RDS	 Audio	 Audio / Lang I/II
 Vol+	 Vol+	 Subtitle	 Subtitle / EQ
 Vol-	 Vol-	 Eject	 Eject / Surround
 Mute	 Mute / Dimmer	 O)I/II	 Shift + Audio / Lang I/II
 Menu/DVD	 Menu / Home	 Stop	 Stop / Hold
 Exit/Return	 Back / Return	 Play/[≡o]	 Play / Slow











 



 

 

 

 

 









 





 




















 



 








Original		Recharge		Original		Recharge	
	/ >/[▽]		Pause / Step / Freeze				
	<</[≡?]		<< / Preset-				
	<</[≡+]		<< / Tune-				
	>>/[≡◇]		>> / Tune+				
	>> /[O]/[≡X]		>> / Preset+				





Original		Rechange		Original		Rechange	
	Power		Power		Mute		Mute / Dimmer
	1		1		P-		CH- / Page-
	2		2		Menu/DVD		Menu / Home
	3		3		Exit/Return		Shift + Back / Return
	4		4		Exit/Return		Exit / Cancel / Clear
	5		5		Up		Up
	6		6		Left		Left
	7		7		OK		OK
	8		8		Right		Right
	9		9		Guide/Top		D.Menu / Top
	Recall		Back / Return		Down		Down
	0		0		Tv/FAV/Radio/Set		TV/Radio /
	Source		AV / Input / RDS		Tv/FAV/Radio/Set		Setup / OPT /
	Vol+		Vol+		Red		Red / Netflix / Search
	A/D / Content		Smart / List		Green		Green / APP / Repeat
	P+		CH+ / Page+		Yellow		Yellow / YouTube / Repeat
	Vol-		Vol-		Blue		Blue / Prime Video / Random





Original		Rechange		Original		Rechange	
	[<>]		Picture / Format				
	<[/]>		Display / Media				
	[i+]/[≡i]		Info / Angle				
	Text		Text / Goto				
	Audio		Audio / Lang I/II				
	Subtitle		Subtitle / EQ				
	Eject		Eject / Surround				
	O)I/II		Shift + Audio / Lang I/II				
	Stop		Stop / Hold				
	Play/[≡o]		Play / Slow				
	II/II>/[▼]		Pause / Step / Freeze				
	I<</[≡?]		I<< / Preset-				
	<</[≡+]		<< / Tune-				
	>>/[≡◇]		>> / Tune+				
	>>I/[O]/[≡X]		>>I / Preset+				

