










Original	Rechange
 Standby / On	 Power
 Title	 Sound / Title
 Menu	 Menu / Home
 Open / Close	 Eject / Surround
 OSD / Setup	 Setup / OPT /
 1	 1
 2	 2
 3	 3
 Slow Fwd	 Shift + Play /
 4	 4
 5	 5
 6	 6
 Prev / Rev	 << / Tune-
 Prev / Rev	  << / Preset-
 7	 7
 8	 8
 9	 9

Original	Rechange
 Next / Fwd	 >> / Tune+
 Next / Fwd	 >>  / Preset+
 0	 0
 Clear	 Exit / Cancel / Clear
 Search	 Red / Netflix / Search
 Pause / Step	 Pause / Step / Freeze
 Up	 Up
 Play	 Play / Slow
 Left	 Left
 Enter	 OK
 Right	 Right
 Stop	 Stop / Hold
 Down	 Down
 Return	 Back / Return
 Play Mode	 Display / Media
 A-B	 Yellow / YouTube / Repeat
 Memory	 Fav / Marker / PC





Original	Recharge	Original	Recharge
TIMER Timer	TIMER SLEEP Sleep / Timer		
EQUALIZER Equalizer	SHIFT + EQ Shift + Subtitle / EQ		
VOL / CH Vol / CH	LIST SMART Smart / List		
empty left	CH PAGE - CH- / Page-		
empty right	CH PAGE + CH+ / Page+		
ZOOM Zoom	SIZE ZOOM Zoom / Size		
ANGLE Angle	ANGLE INFO Info / Angle		
SUBTITLE Subtitle	EQ SUBTITLE Subtitle / EQ		
AUDIO Audio	LANG I/II AUDIO Audio / Lang I/II		

