










 




 



 

 


 



 


 
 


 


Original	Rechange
 POWER	 Power
 MUTE	 Mute
 P.MODE	 Shift + Format
 S.MODE	 Dual
 SLEEP	 Sleep
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/-	 Guide
 EXIT	 Exit

Original	Rechange
 INPUT	 AV
 MENU	 Menu
 RECALL	 Pre Ch
	 Left
	 Right
	 Up
	 Down
 ENTER	 Ok
 VOL+	 Vol +
 VOL-	 Vol -
 CH+	 Ch +
 CH-	 Ch -
 RED/DVD	 Red
 GREEN/DVD	 Green
 YELLOW/TITLE	 Yellow
 BLUE/LANG	 Blue
 DISPLAY	 Info





Original		Rechange		Original		Rechange	
	ZOOM		Shift + Eject		P.MODE1		Media
	PREVIEW		TV/R		SUBTITLE		Subt
	SIZE		Format		ANGLE		D. Menu
	STOP		Stop				
	PLAY/PAUSE		Play				
	II>/SLOW		Pause				
	<<		<<				
	>>		>>				
	I<<		I<<				
	>>I		>>I				
	S.MODE1		Shift + Menu				
	EJECT		Eject				
	AUTO		Options				
	A-B		Shift + Play				
	PROG		Shift + Sleep				
	GOTO		Shift + Subt				
	REPEAT		Text				

