







 

























Original	Rechange
 Power	 Power
 Mute	 Mute / Dimmer
 EPG	 Guide / EPG / /--
 FAV	 Fav / Marker / PC
 FAV+	 Shift + CH+ /
 FAV-	 Shift + CH- /
 P.Mode	 Picture / Format
 S.Mode	 Sound / Title
 I/II/Audio	 Audio / Lang I/II
 SOMM.	 Sleep / Timer
 Auto/Temps	 Smart / List
 AV	 AV / Input / RDS
 HDMI	 Shift + 0
 Aspect	 Shift + Picture / Format
 AFF.	 Info / Angle
 Up	 Up
 Source	 Shift + AV / Input / RDS

Original	Rechange
 Left	 Left
 VAL.	 OK
 Right	 Right
 Sortie	 Exit / Cancel / Clear
 Down	 Down
 Menu	 Menu / Home
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 ENR. Menu	 D.Menu / Top
 9	 9
 0	 0





Original	Recharge	Original	Recharge
Aller A	Back / Return	<</Maint.	<< / Tune-
Vol+	Vol+	>>/SS Page	>> / Tune+
Media	Display / Media	I<</Taille	I<< / Preset-
Rec	Rec / Rec Mode	>>I/Annul.	>>I / Preset+
CH+	CH+ / Page+		
Vol-	Vol-		
SS Tit.	Subtitle / EQ		
Titre/Tv/Radio	TV/Radio /		
CH-	CH- / Page-		
Red/Eject	Red / Netflix / Search		
Green/D.Menu	Green / APP / Repeat		
Yellow/Conf.	Yellow / YouTube / Repeat		
Blue/D.Disp	Blue / Prime Video / Random		
Play/Pause/Texte	Play / Slow		
Stop/Index	Stop / Hold		
A-B/Mix	Setup / OPT /		
Repeter/Revel.	Text / Goto		

