


 
 



 

 

 




 















 
 


 
 


 

 



 
 
 
 



 







 









 








Original		Rechange		Original		Rechange	
	Power		Power		Recall		Back / Return
	Mute		Mute / Dimmer		Red		Red / Netflix / Search
	P.Mode		Picture / Format		Green		Green / APP / Repeat
	S.Mode		Sound / Title		Yellow		Yellow / YouTube / Repeat
	Sleep		Sleep / Timer		Blue		Blue / Prime Video / Random
	Audio		Audio / Lang I/II		Menu		Menu / Home
	1		1		Up		Up
	2		2		Source		AV / Input / RDS
	3		3		Left		Left
	4		4		OK / Enter		OK
	5		5		Right		Right
	6		6		Exit		Exit / Cancel / Clear
	7		7		Down		Down
	8		8		Info		Info / Angle
	9		9		CH+		CH+ / Page+
	Freeze		Pause / Step / Freeze		Home		Shift + Menu /
	0		0		Vol+		Vol+





	Original	Recharge		Original	Recharge
	CH-	 CH- / Page-		Zoom-	 Shift + Down
	Mouse	 Smart / List		Zoom+	 Shift + Up
	Vol-	 Vol-		EPG	 Guide / EPG / -/-
	<< / Text	 << / Tune-		DTV / Radio	 TV/Radio /
	>> / Text	 Text / Goto		Rec	 Rec / Rec Mode
	>> / Hold	 Shift + Stop /		Subtitle	 Subtitle / EQ
	>> / Hold	 >> / Tune+			
	I<< / Mix	 I<< / Preset-			
	I<< / Mix	 Shift + Text /			
	>>I / Reveal	 >>I / Preset+			
	Play/Pause / Index	 Play / Slow			
	Stop / Size	 Stop / Hold			
	Stop / Size	 Zoom / Size			
	FAV	 Fav / Marker / PC			
	Aspect	 Shift + Picture / Format			
	File	 Display / Media			
	Delete	 Eject / Surround			

