


 










 











 
 

 




 
 

 

 
 


 

 

 



 



 


 



 
 
 
 

 




Original		Rechange		Original		Rechange	
	Power		Power		S. Mode		Dual
	Mute		Mute		Source		AV
	1		1		CH +		Ch +
	2		2		CH -		Ch -
	3		3		Up		Up
	4		4		Right		Right
	5		5		Down		Down
	6		6		Left		Left
	7		7		OK		Ok
	8		8		CH. Edit		Smart
	9		9		Menu		Menu
	0		0		Aspect		Format
	-/--		Shift + Guide		Sleep		Sleep
	Repeat		Text		Rec		Rec
	Vol +		Vol +		Rec Menu		Shift + Rec
	Vol -		Vol -		Red		Red
	Pic. Mode		Options		Green		Green





Original		Rechange		Original	Rechange
	Yellow		Yellow		
	Blue		Blue		
	CH. Group		3D		
	TV / Radio		TV/R		
	I/II Audio		Shift + Dual		
	Subtitle		Subt		
	EPG		Guide		
	Info		Info		
	Play/Pause / Size		Play		
	Play/Pause / Size		Pause		
	Stop / Reveal		Stop		
	I<< / Text (Page -)		I<<		
	>>I / Index (Page +)		>>I		
	<< / Subpage (FAV -)		<<		
	>> / Hold(Fav +)		>>		

