

 





 





 


 

 

 

 

 




Original		Recharge		Original	Recharge
	Power		Power		
	Mute		Mute		
	Menu		Menu		
	Vol+		Vol +		
	Vol-		Vol -		
	I<<		I<<		
	Play / Pause		Play		
	Play / Pause		Pause		
	>>I		>>I		
	Source+		Up		
	Source-		Down		
	Mode		Smart		
	Display		Info		

